

# **USER'S MANUAL**

## **DVD KARAOKE PLAYER**

**AR-909A**

**AR-909SD**

**AR-909MD**

**AR-909SMD**

## **TERMS OF PRODUCT WARRANTY**

- The term of product warranty is 12 months as from the date of warranty activation, and not more than 18 months as from the date of manufacture.
- The product is within its warranty term, and the damages are caused by the manufacturer's faults.
- The product must have SMS (anti-tampering) stamp intact, and the manufacturer's sealing stamp is not torn, erased, or revised.
- No warranty for those products damaged due to accidents (broken due to dropping, acts of God, fire, explosion, water leaking in, insects,...), or their accessories (remote controls, disks, microphones,...) or their use not in accordance with the attached user's manual.
- No warranty for data stored by customer in the hard disk.
- Apart from the above terms, all products shall be repaired and charged depending on conditions of damage.

## USING THE REMOTE CONTROL

 
### 1. Installing and removing battery:







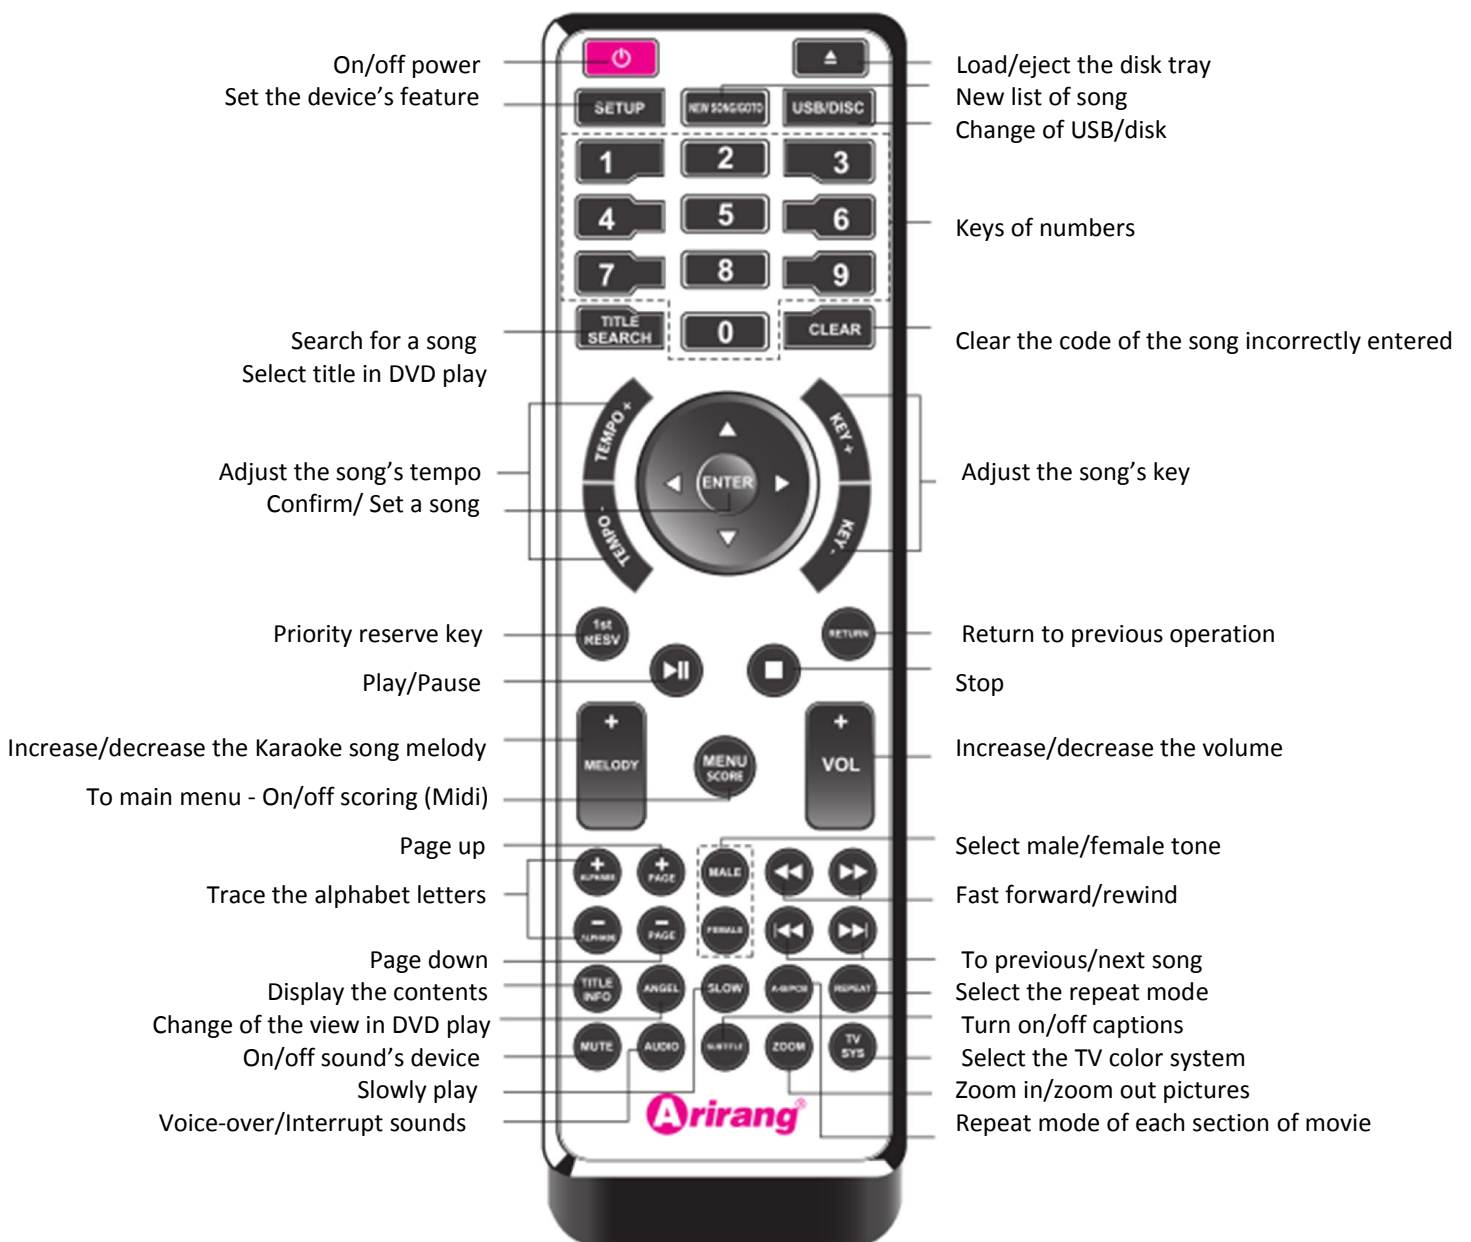


Insert 2 AA batteries into remote control

Make sure for installing in right polarity +/-


### 2. Position of keys on the remote control:



 
## A- ACCESSORIES

			
Remote control	2 AA batteries	Audio cable	Video cable
			
Song book	Karaoke disk	User's manual	

## B- CONNECTION WITH TV AND AMPLIFIER

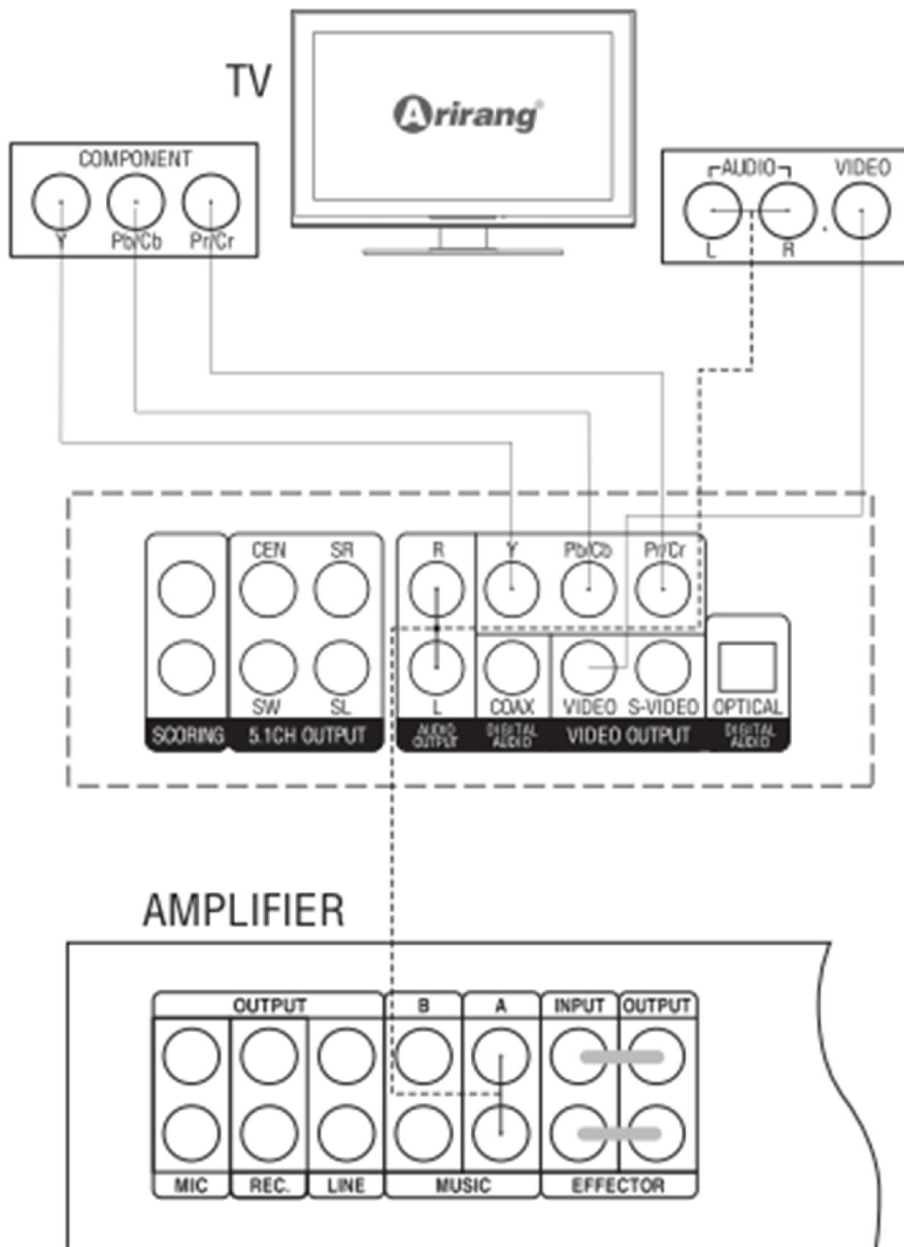

## C- USE DVD KARAOKE PLAYER

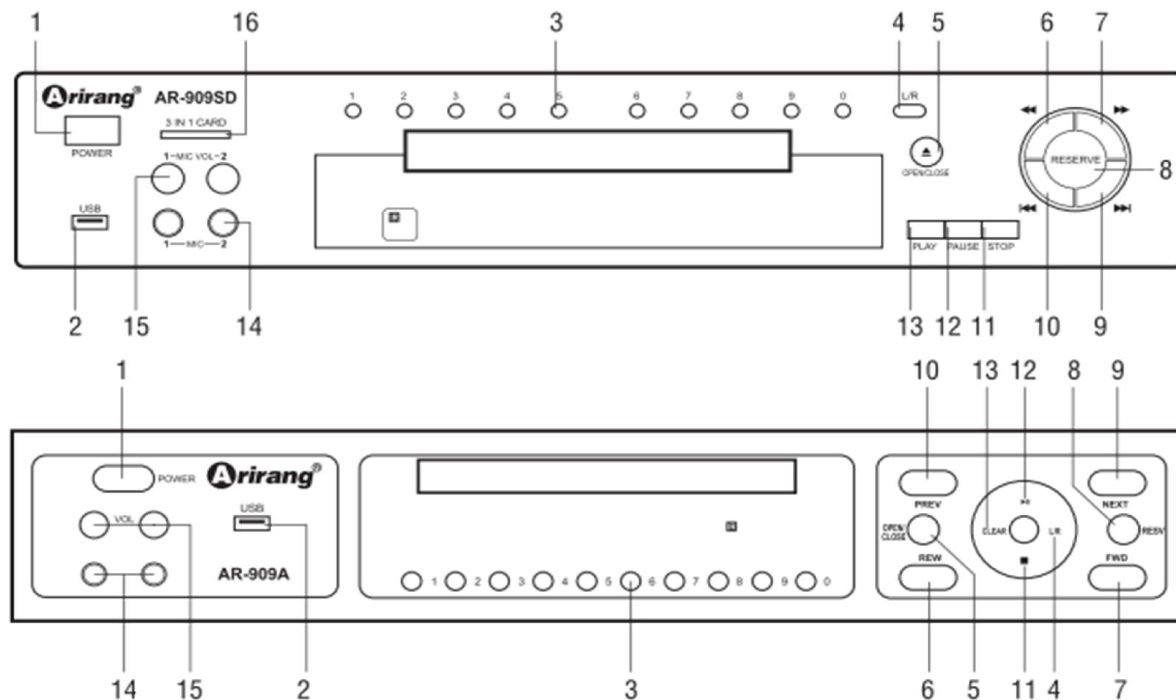 

**1. POWER**

**2. USB: USB port**

**3. NUMBER: Number keys**

**4. L/R: Interrupt VCD sounds**

**5. OPEN/CLOSE: Load/eject the disk tray**

**6. REW: Fast rewind**

**7. FWD: Fast forward**

**8. RESV: Store the selected song**

**9. NEXT: Next song**

**10. PREV: Previous song**

**11. STOP**

**12. PAUSE**

PLAY/PAUSE (909A)

**13. PLAY**

CLEAR: delete the selected song (909A)

**14. MIC: Micro port**

**15. MIC VOL: Micro volume**

 
**16. 3 IN 1 CARD: Memory card slot (909SD/SMD)**

## D- PLAY MASECO MIDI VISION KARAOKE DISK


### 1. Select the song:

#### 1.1 Use song book attached with the device

Press number keys to select the song

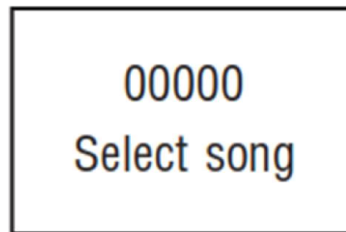

 Corresponding to the selected number, the song will be displayed

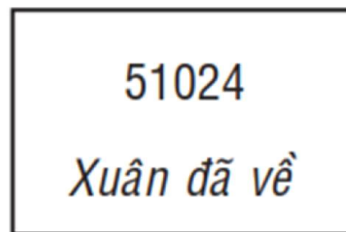

Press <ENTER> key to store song to list in order



## 1.2 Use the search menu on device

Press <TITLE> key to enter the search menu

VIETNAM		CHINA	ENGLISH	PHILIPINE
50650	AI BIẾT			
50070	AI CHO EM TÌNH YÊU			
50012	AI CHO TÔI TÌNH YÊU			
50210	AI LÊN XỨ HOA ĐÀO			
52859	AI ĐI NGOÀI SƯỜNG GIÓ			
50038	AI ĐƯA EM VỀ			
0		A	B	C D E F G H I J K L M N O P Q R S T U V W X Y Z

- Press ▲▼ key to select the song
- Press ◀▶ key to select the language
- Press <ENTER> key to store the selected song
- Press <GOTO> key to select the song according to the alphabet

\*NEW SONG: The list of new songs **(AR-909MD/909SMD)**

## 2. Delete the song:

Press Left/Right key to select the song. Press <Clear> to delete the selected song

Press <CANCEL> key to delete the selecting song

Press <STOP>  to stop the playing song, press CANCEL to delete the next song

## 3. Adjust tempo:

Press <TEMPO> +/- key to adjust tempo of the song

## 4. Adjust tone:

Press <KEY> +/- to adjust the pitch of the song

## **5. Adjust Melody:**

Press <Melody> +/- key to increase or decrease melody of the song (AR-909MD, AR-909SMD)

## **6. Male – Female:**

Press <Male> or <Female> key to select male or female tone (AR-909MD, AR-909SMD)

## **E- PLAY DVD, SVCD, VCD, CD, MP3, MP4, EVD**

1. <SUBTITLE>: Select secondary language
2. <VOL> +/-: Adjust the volume of song
3. <PLAY>: Play
4. <PAUSE>: Pause
5. <AUDIO/Language>: Select the voice-over language
6. <REW>: Fast rewind
7. <FWD>: Fast forward
8. <PREV>: To previous song
9. <NEXT>: To next song